

# Assembly Instructions for Ottoman Gas Lift

1

## Step 1

Locate the bases within the desired room, and remove all the packaging.

## Step 2

Place the base(s) on their side so that you can see the underside of the bed (fig.1)

## Step 3

If feet need to be fitted to the bases, do this now (the feet are inside the base)

## Step 4

Align the first base in it's desired position in the room

## Step 5

Repeat with the second base (ensure the round corners are on the outside)

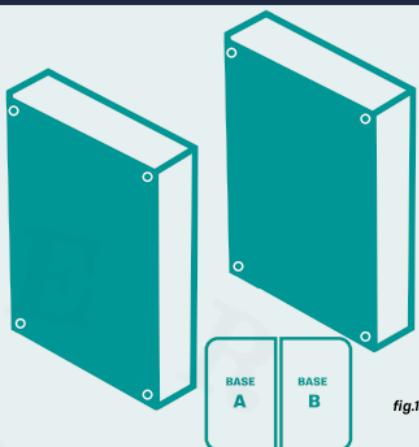


fig.1

2

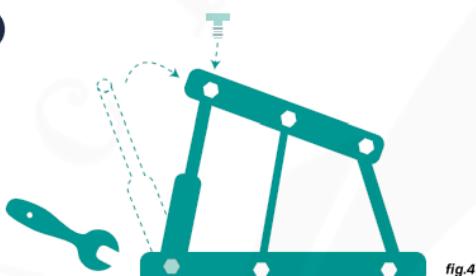


fig.4

3

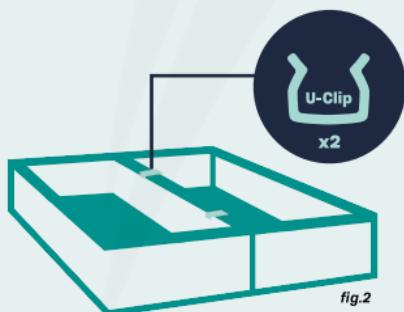


fig.2

## Step 6

Once the ottomans are open, place the bolts on the pistons, as shown in diagram (fig.4)

## Step 7

Please **tighten** the bolts but don't over tighten to set the required opening resistance.

## Step 8

Place the **"U-clips"** (fig.2) (see diagram) and locate the clips on to the bases of the units in illustrated location, then place the units the right way up on their feet.

## Step 9

With help, position the units in the desired location and in the desired orientation in terms of the Ottoman opening direction.

4



## Step 9a

For side opening Headboard spacers needs to be in between headboard & bed base (fig.3)

## Step 8

Locate M8 Bolt & Screw it to the side of the lift (fig.3)  
End opening see (fig.3a)



## Step 9

Choose which side you want the headboard and place the Screw.  
(fig.3)  
End opening see (fig.3a)